




Conexión Hembra FORX 45°

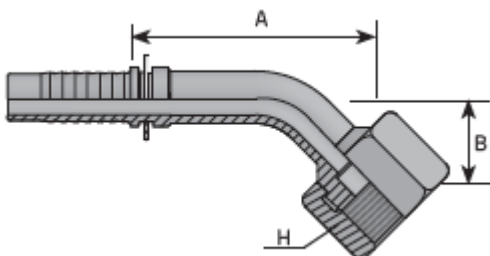

CODIGO	DESCRIPCION	D.N.	HOSE SIZE	DIAM	T INCH	t/1"	H MM	B MM	A MM	BAR	PSI
LAMORFS450406	Conexion 04-04FFORX45 (ORFS 45 9/16"-18 06)	-4	1/4"	6,4	9/16"	18	17	15	45	450	6526
LAMORFS450606	Conexion 04-06FFORX45 (ORFS 45 11/16"-16 06)	-4	1/4"	6,4	11/16"	16	22	15,5	45,5	450	6526
LAMORFS450610	Conexion 06-06FFORX45 (ORFS 45 11/16"-16 10)	-6	3/8"	9,5	11/16"	16	22	13	51	445	6454
LAMORFS450810	Conexion 06-08FFORX45 (ORFS 45 13/16"-16 10)	-6	3/8"	9,5	13/16"	16	24	17	52	445	6454
LAMORFS450813	Conexion 08-08FFORX45 (ORFS 45 13/16"-16 13)	-8	1/2"	12,8	13/16"	16	24	18	58	415	6019
LAMORFS451013	Conexion 08-10FFORX45 (ORFS 45 1"-14 13)	-8	1/2"	12,8	1"	14	30	20	61	415	6019
LAMORFS451016	Conexion 10-10FFORX45 (ORFS 45 1"-14 16)	-10	5/8"	16	1"	14	30	20	55	350	5076
LAMORFS451216	Conexion 10-12FFORX45 (ORFS 45 1"3/16-12 16)	-10	5/8"	16	1.3/16"	12	36	21	57	350	5076
LAMORFS451219	Conexion 12-12FFORX45 (ORFS 45 1"3/16"-12 19)	-12	3/4"	19	1.3/16"	12	36	23	58	350	5076
LAMORFS451625	Conexion 16-16FFORX45 (ORFS 45 1"7/16"-12 25)	-16	1"	25,4	1.7/16"	12	41	26	81	280	4061
LAMORFS452025	CONEXION 16-20FFORX90(ORFS 45 1"11/16-12 25)	-16	1"	25,4	1.11/16"	12	83	28	50	280	4061
LAMORFS452032	Conexion 20-20FFORX45 (ORFS 45 1"11/16-12 32)	-20	1.1/4"	31,8	1.11/16"	12	50	34	93	210	3046
LAMORFS452438	Conexion 24-24FFORX45 (ORFS 45 2"-12 38)	-24	1.1/2"	38,1	2"	12	60	45	112	185	2683

La información recogida en esta ficha (Catálogo) es de carácter orientativo y puede ser modificada o no sin previo aviso. UTECSA no se hace responsable de una correcta utilización del producto, salvo las referentes a defectos de fabricación.